

---

## Air Filter

### < Replacing the air filter >

The oil-soaked viscous air filter element does not require inspection under normal operating conditions but should be replaced every 20,000km. Under severe conditions the filter should be inspected and replaced more regularly.

Replacements are available at your Authorized Honda Dealer.