

f engine overheats

engine overheats

Procedure >

Switch the ignition OFF and then switch it ON again. Listen to the radiator fan to ensure it is operating.

- If the radiator fan is not working: stop the engine and contact an Authorized Dealer for assistance.
- If the radiator fan is working: Switch the engine OFF and wait for it to cool down.

Once the engine has cooled, check the coolant level (p.53) and refill if necessary (p.54).

3. Check for leaks from the radiator hoses and elsewhere in the cooling system.
 - If a leak exists:
Do not start the engine. Contact an Authorized Honda Dealer for assistance.
 - If no leak exists:
The motorcycle may be able to be ridden. Contact an Authorized Honda Dealer if the engine overheats again.
4. Even if you do not encounter further overheating problems, have the engine checked by an Authorized Honda Dealer as soon as possible.