

## FINAL DRIVE OIL


### Oil Level Check

Check the final drive oil level when specified by the maintenance schedule (page 58 ).

1. Place the motorcycle on its side stand.
2. Remove the oil filler cap (1 ).
3. Check that the oil level reaches the lower edge of the oil cap hole (2 ).

If the level is low, check for leaks. Pour fresh oil through the oil filler hole until it reaches the lower edge of the opening.

**Recommended Oil:**  
**HYPOID GEAR OIL SAE 80**

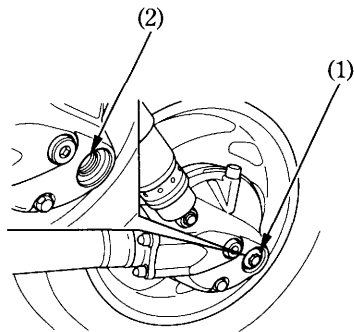

(1) Oil filler cap

(2) Oil cap hole