




FUEL LID AND SEAT OPENER SWITCH

If the ignition switch is ON or OFF position, fuel lid and seat opener switch (1) will not operate.

Fuel Lid

Open the Fuel Lid:

1. Insert the ignition key (2) and turn it to the position of "SEAT FUEL" (3).
2. Push the "FUEL" (4) side of the fuel lid and seat opener switch.
3. Open the fuel lid (5).

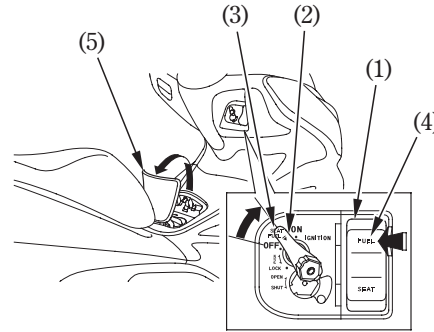

Close the Fuel Lid:

Close the fuel lid until it locks. Make sure the fuel lid is secure before riding.

- (1) Fuel lid and seat opener switch
(2) Ignition key

- (3) "SEAT FUEL"
(4) "FUEL"
(5) Fuel lid

