



STAND BY indicator flashes, but engine does not start, perform the followings.

Symptom	Possible cause	What to do
Engine does not start even open the throttle	Low (or dead) battery or battery lead is loose.	Check the battery and battery terminals. If battery is weak, charge the battery.

