



Flooded Engine

If the engine fails to start after repeated attempts, it may be flooded.

1. Open the throttle fully.
2. Press the start button for 5 seconds.
3. Follow the normal starting procedure.
4. If the engine starts with unstable idle, open the throttle slightly.
If the engine does not start, wait for 10 seconds, then follow steps 1–3 again.

