

(Ref. No.) Description	Function
(7) Right turn signal indicator	Flashes when the right turn signal operates.
(8) Clock button	Adjust the digital clock (page 15).
(9) Fuel reserve indicator	Lights when there is only few fuel left in the tank. about: 4.0 ℓ (1.06 US gal , 0.88 imp gal)
(10) Neutral indicator (green)	Lights when the transmission is in neutral.
(11) Coolant temperature gauge	Shows coolant temperature (page 13).
(12) Low oil pressure indicator (red)	Lights when engine oil pressure is below normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when engine starts, except for occasional flickering at or near idling speed when engine is warm. CAUTION: * Running the engine with insufficient oil pressure may cause serious engine damage.
(13) High beam indicator (blue)	Lights when the headlight is on high beam.
(14) Left turn signal indicator (green)	Flashes when the left turn signal operates.