

MAJOR COMPONENTS (Information you need to operate this motorcycle)

▲ WARNING

- **If the Pre-ride Inspection (page 48) is not performed, severe personal injury or vehicle damage may result.**

SUSPENSION

Rear Suspension

The spring preload adjuster has 36 positions for different road or riding conditions.

To adjust the spring preload, turn the adjuster knob (1).

To reduce (LOW):


Turn the adjuster counterclockwise toward LOW for light load and smooth condition.

To increase (HIGH):

Turn the adjuster clockwise toward HIGH for a firmer ride and rough road condition.

To adjust the adjuster to the standard position, proceed as follows:

1. Turn the adjuster knob counterclockwise until it will no longer turn. This is the full LOW position.
2. The adjuster set in the standard position when the adjuster knob is turned clockwise 12 clicks.

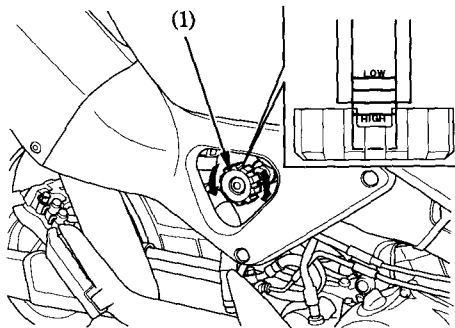

(1) Spring preload adjuster