


FUEL

Manual Fuel Cock

The fuel cocks (1) are inaccessible and remains ON all the time.

Automatic Fuel ON-OFF

With the fuel cocks set to ON, fuel flows to the carburetors only when the engine is being started or is running. A diaphragm shuts off fuel flow when the engine is turned off.

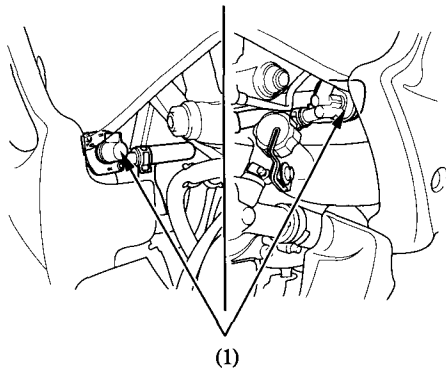

(1) Manual fuel cock