


INNER COWL

Removal:

1. Pull the tabs (1).
2. Remove the inner cowl (2).

Installation:

- Installation can be done in the reverse order of removal.

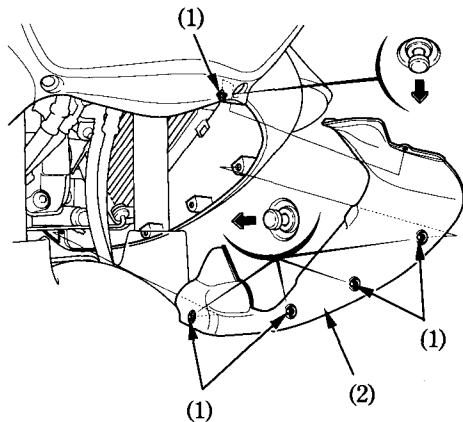

- (1) Tabs
(2) Inner cowl