



- (1) Stopper bolt
- (2) Lock nut

- (3) Adjusting nut

3. Apply the brake several times and check for free wheel rotation after the brake pedal is released.

NOTE:

- * Make sure the cut-out on the adjusting nut is seated on the brake arm pin.
- * If proper adjustment cannot be obtained by this method, see your authorized Honda dealer.

Other Checks:

Make sure the brake arm, spring and fasteners are in good condition.