


# ESSENTIAL INDIVIDUAL COMPONENTS

## IGNITION SWITCH

The ignition switch (1) is located near the indicator panel.

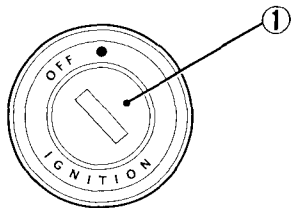

(1) Ignition switch

Key Position	Function	Key Removal
OFF	Engine and lights cannot be operated.	Key can be removed
●	Engine and lights can be operated. For U Type, the engine must be on to operate the lights.	Key cannot be removed