

MAINTENANCE SCHEDULE

The following items require some mechanical knowledge. Certain items (particularly those marked * and**) may require more technical information and tools. Consult your authorized Honda Dealer. Perform the Pre-ride Inspection at each scheduled maintenance period.

I : INSPECT AND CLEAN, ADJUST, LUBRICATE OR REPLACE IF NECESSARY

C : CLEAN R : REPLACE A : ADJUST L : LUBRICATE

ITEM		FREQUENCY	WHICHEVER COMES FIRST ↓ NOTE	ODOMETER READING [NOTE (1)]				REFER TO PAGE
				→				
				x 1000km x 1000mi	1 0.6	4 2.5	8 5	
			MONTHS	6	12	18		
*	FUEL LINE				I	I	I	—
*	FUEL STRAINER SCREEN				C	C	C	—
*	THROTTLE OPERATION				I	I	I	56
*	CARBURETOR-CHOKE				I	I	I	—
	AIR CLEANER		NOTE (2)		C	C	C	48
	CRANKCASE BREATHER		NOTE (3)		C	C	C	51
	SPARK PLUG				I	R	I	52—53
*	VALVE CLEARANCE				I	I	I	54—55
	ENGINE OIL				R	EVERY 2,000km (1,250 mi) R		24, 49—51
	ENGINE OIL STRAINER SCREEN						C	50—51
**	ENGINE OIL CENTRIFUGAL FILTER						C	
*	DECOMPRESSOR SYSTEM				I	I	I	57
*	CAM CHAIN TENSION				A	A	A	59
*	CARBURETOR-IDLE SPEED				I	I	I	58