


4. Check the chain slipper (3) and chain guide slider (2) for wear.

When the thickness (4) of the chain slipper in the slipper reaches the limit, the chain slipper must be replaced. Chain slipper thickness service limit:


10 mm (0.4 in)

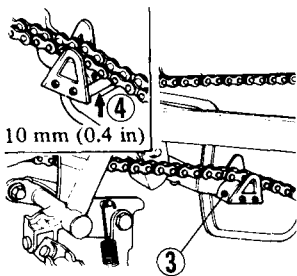

(3) Chain slipper (4) Chain slipper thickness

Sprocket inspection:

1. Inspect the sprocket teeth for wear or damage.

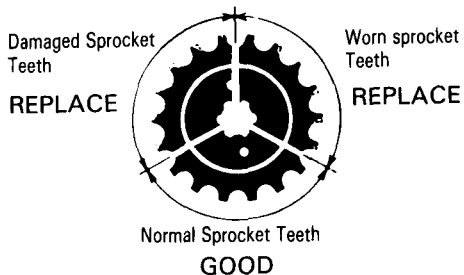

2. If the drive chain or sprockets are excessively worn or damaged, they should be replaced. Never use a new chain with worn sprockets, rapid chain wear will result.