

### Installation Note:

- Reverse the removal procedure.
- Tighten the axle nut to specified torque.  
Axle nut torque:  
45 N·m (4.5 kg-m, 33 ft-lb)
- Adjust the brake (pages 16, 17) and drive chain (pages 62, 63).
- After installing the wheel, apply the brakes several times, and check for free wheel rotation when released.

### **⚠ WARNING**

- \* **If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.**

### **CAUTION:**

- \* **Always replace used cotter pins with new ones.**