

ITEM	FREQUENCY	WHICHEVER COMES FIRST ↓	ODOMETER READING [NOTE (3)]				Refer to
			1,000 km (600 mi)	6,000 km (3,750 mi)	12,000 km (7,500 mi)	18,000 km (11,250 mi)	
	EVERY						
DRIVE CHAIN	NOTE (2)	I, L	EVERY	1,000 km	(600 mi)		Page 134
BATTERY	MONTH	I	I	I	I		Page 164
BRAKE SHOE WEAR			I	I	I		Page 152
BRAKE SYSTEM		I	I	I	I		Page 144
* BRAKE LIGHT SWITCH		I	I	I	I		Page 176
* HEADLIGHT AIM		I	I	I	I		
CLUTCH		I	I	I	I		Page 120
SIDE STAND			I	I	I		Page 154
* SUSPENSION		I	I	I	I		Page 154
* NUTS, BOLTS, FASTENERS	NOTE (2)	I	I	I	I		
** WHEELS/SPOKES	NOTE (2)	I	I	I	I		
** STEERING HEAD BEARING		I		I			

- * SHOULD BE SERVICED BY AN AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED REFER TO THE OFFICIAL HONDA SHOP MANUAL.
- ** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.

NOTE: (1) Service more frequently when riding in dusty areas.
 (2) Service more frequently when riding OFF-ROAD.
 (3) For high odometer readings, repeat at the frequency interval established here.