


2. If ignition timing is incorrect loosen the two base plate locking screws ⑨ and turn the base plate ⑩ slowly in either direction. Turning it clockwise will advance timing, and vice versa. Use of a stroboscopic timing light is recommended to obtain accurate setting. After adjustment, make sure that the "F" mark is aligned with index mark at an idle speed of 1,200 rpm, and also that index mark stays within advance marks ⑧ (page 39) at 4,000 rpm. or above.

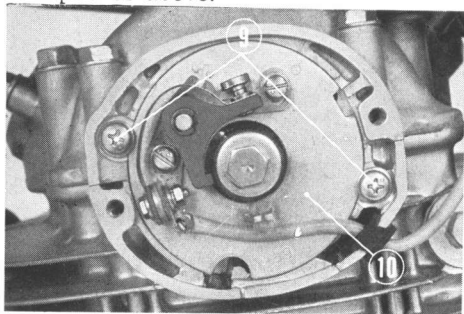


⑨ Base plate locking screws ⑩ Base plate

## Valve Tappet Adjustment

Excessive valve tappet clearance will cause tappet noise, and little or no clearance will cause valve damage and loss of power. Therefore, valve tappet clearance should be maintained properly.

1. Raise the seat and remove the fuel tank.
2. Remove the intake and exhaust tappet covers.
3. Remove the generator cover.

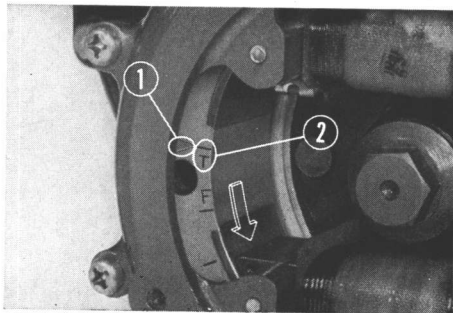

① Index mark ② "T" mark