


4. Remove the cotter pin ③ from rear axle nut.
5. Remove the rear axle nut ④, and pull out the rear axle ⑤, and then the rear wheel can be removed.
6. To install the rear wheel, follow the reverse of removal procedure outlined in steps 1 through 5.

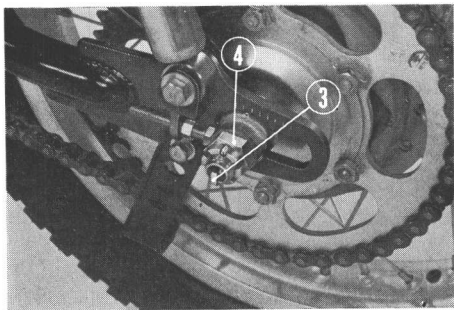


- ③ Cotter pin  
④ Rear axle nut

## Battery Maintenance

### Battery Electrolyte Replenishment:

The battery is mounted under the seat, and is accessible by releasing the seat lock and raising the seat. Remove the tool tray and battery holding band. Raise the battery slightly to check the battery electrolyte.

The electrolyte level must be maintained between the upper ③ and lower level ④ marks on the side of the battery.

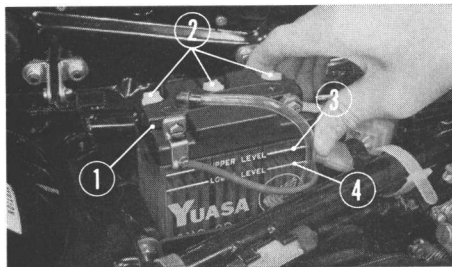

- ① Battery    ② Filler caps  
③ Upper level mark    ④ Lower level mark