

Ref. No.	Description	Function
1	Speedometer	Shows driving speed.
2	Gear range indicators	Indicate speed range for each gear.
3	Trip counter	Shows mileage per trip or section of route.
4	Trip counter reset knob	Pull knob to "OFF" and turn to zero (0). Push knob to "ON" to begin counting.
5	Total counter	Shows accumulated mileage.
6	High beam indicator (blue)	Lights when headlight is on high beam.
7	Turn signal indicator (amber)	Flashes when either turn signal operates.
8	Neutral indicator (green)	Lights when transmission is in neutral.