


Steering Lock

The steering lock (1) is on the steering stem.

To Lock:

Turn the handlebars all the way to the left or right, insert the key into the lock, turn the key clockwise and remove it.

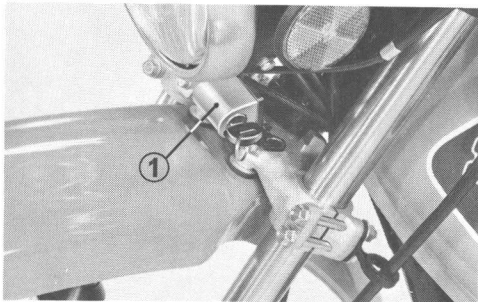


(1) Steering lock

Helmet Holder

The helmet holder (1) is on the lower left side of the seat. Insert the ignition key (2) and turn it counterclockwise to unlock. Hang your helmet on the lock and push in the holder pin (3).

WARNING

* *The helmet holder is designed for use while parking. Do not operate the motorcycle with a helmet attached to the holder. The helmet may interfere with the rear wheel, possibly stopping the wheel.*

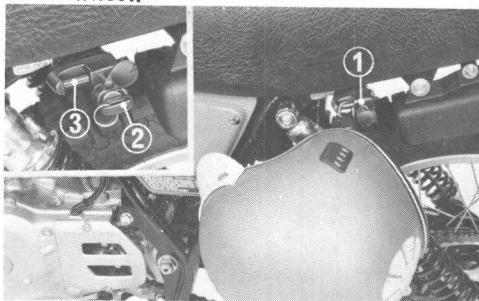

(1) Helmet holder
(2) Ignition key

(3) Holder pin