

## ENGINE OIL

### Engine Oil Level Check


Check engine oil level each day before operating the motorcycle.

The oil filler cap (1) is at the front of the right crankcase cover and contains a dipstick for measuring the oil level. Oil level must be maintained between the upper (2) and lower (3) level marks on the dipstick.

1. With the motorcycle upright on level ground, remove the oil filler cap/dipstick, wipe it clean, and reinsert the dipstick without screwing it in.
2. Add the specified oil up to the upper level mark, if required.
3. Replace the filler cap/dipstick.  
Check for oil leaks.

### CAUTION

*\* Running the engine with insufficient oil can cause serious engine damage.*

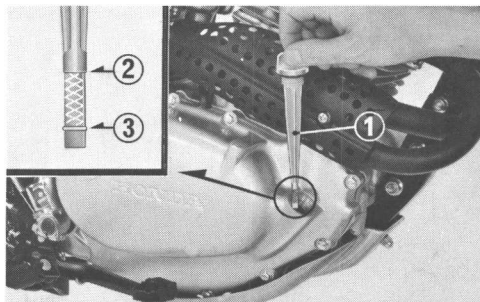

(1) Filler cap/dipstick      (3) Lower level mark  
(2) Upper level mark