

## TIRES

Proper air pressure will provide maximum stability, riding comfort and tire life.

Check tire pressures frequently and adjust if necessary.

### NOTE:

- \* Tire pressure should be checked when the tires are "cold", before you ride.

On/off-the-road tires are standard on this model. Select the right tires in accordance with the following specifications:

Cold tire pressures kg/cm <sup>2</sup> (psi)	Up to 90kg (200 lb) load	Front: 1.5 (21) Rear: 1.5 (21)
	Up to vehicle capacity load	Front: 1.5 (21) Rear: 1.5 (21)
Vehicle capacity load limit	150 kg (330 lbs)	
Tire size	Front: 3.00-23-4PR Rear: 4.60-18-4PR	

Check the tires for cuts, imbedded nails, or other sharp objects. See your authorized Honda Dealer for replacement of damaged tires or punctured inner tubes.

### WARNING

- \* *Do not attempt to patch a damaged tire or inner tube. Wheel balance and tire reliability may be impaired.*
- \* *Improper tire inflation will cause abnormal tread wear and create a safety hazard. Underinflation may result in the tire slipping on, or coming off of the rim.*
- \* *Operation with excessively worn tires is hazardous and will adversely affect traction and handling.*
- \* *The use of tires other than those listed on the tire information label may adversely affect handling.*