

ITEM	FREQUENCY	WHICHEVER COMES FIRST	ODOMETER READING [NOTE (5)]				Refer to
			600mi (1,000km)	3,600mi (6,000km)	7,200mi (12,000km)	10,800mi (1,800km)	
			EVERY				
NON-EMISSION RELATED ITEMS	DRIVE CHAIN	NOTE (3)	I EVERY 600mi(1,000km)				Pages 49–51
	BATTERY	MONTH	I	I	I	I	Pages 54–55
	BRAKE SHOE WEAR			I	I	I	Page 48
	BRAKE SYSTEM		I	I	I	I	Pages 46–47
	* BRAKE LIGHT SWITCH		I	I	I	I	
	* HEADLIGHT AIM		I	I	I	I	
	CLUTCH FREE PLAY		I	I	I	I	Page 52
	SIDE STAND			I	I	I	Page 53
	* SUSPENSION		I	I	I	I	
	** SPARK ARRESTER (USA ONLY)			C	C	C	
	* NUTS, BOLTS, FASTENERS	NOTE (4)	I	I	I	I	
	** WHEELS/SPOKES	NOTE (4)	I	I	I	I	
	** STEERING HEAD BEARING		I		I		

* SHOULD BE SERVICED BY AN AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SHOP MANUAL.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.

NOTE: (1) More frequent service may be required when often riding in rain or at full throttle. (USA ONLY)

(2) More frequent service may be required when riding in dusty areas.

(3) Initial service period is 200 miles (300 km).

(4) More frequent service may be required when riding OFF-ROAD.

(5) For higher odometer readings, repeat at the frequency interval established here.