


Crankcase Breather (USA ONLY)


1. Remove the drain plug (1) from the tube (2), and drain the deposits.
2. Reinstall the drain plug.

NOTE:

- * Service more frequently when often driven in rainy conditions or at wide open throttle. Service if the deposit level can be seen in the transparent section (3) of the drain tube.

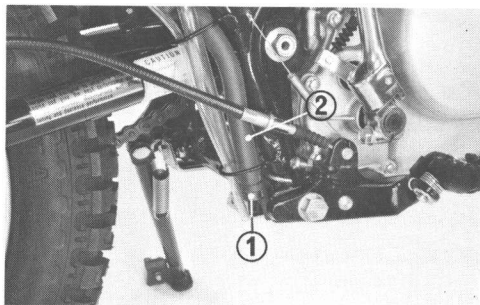

(1) Drain plug (2) Tube

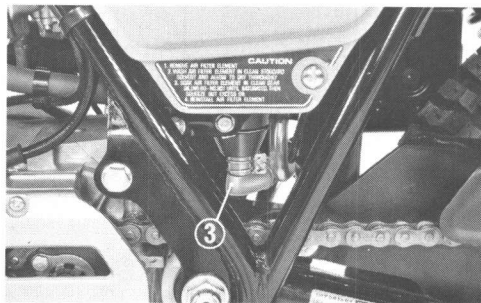

(3) Transparent section