


## Side Stand

Check the rubber pad for deterioration or wear. Replace if wear extends to wear line (1) as shown.

Check the side stand spring for damage and loss of tension, and the side stand assembly for freedom of movement. See your authorized Honda dealer for replacement.

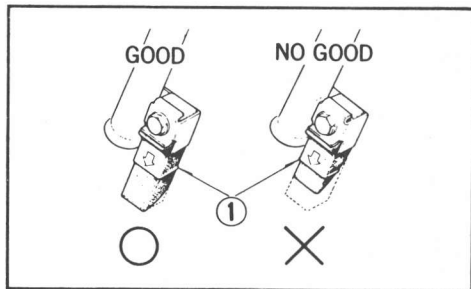

(1) Wear line