

| | |
|----------------------------------------------------------------|----|
| Contact Breaker Point Gap and Ignition Timing Adjustment | 40 |
| Cam Chain Adjustment | 42 |
| Air Cleaner Maintenance | 43 |
| Spark Arrestor Maintenance | 44 |
| Throttle Cable Adjustment | 45 |
| Carburetor Adjustment | 46 |
| Fuel Filter Maintenance | 47 |
| Clutch Adjustment | 48 |
| Drive Chain Maintenance | 50 |
| Wheel Spoke Retightening | 53 |
| Front Brake Adjustment | 53 |
| Rear Brake Adjustment..... | 55 |
| Front Suspension Inspection | 56 |
| Front Fork Oil Change..... | 56 |
| Rear Suspension Inspection | 57 |
| Front Wheel Removal | 58 |
| Rear Wheel Removal..... | 59 |
| Battery Maintenance | 60 |
| Stoplight Switch Adjustment | 62 |
| Headlight Beam Adjustment | 63 |
| Headlight Replacement | 63 |