

Ref. No.	Description	Function
①	Speedometer	Indicates driving speed.
②	Odometer	Indicates total accumulated distance traveled.
③	High beam indicator light (blue)	Light will be on when headlight is on high beam.
④	Neutral indicator light (green)	Light will be on when the transmission is in neutral.
⑤	Tachometer	Indicates engine rpm.
⑥	Turn signal indicator light (amber)	The light flashes when turn signals are operating.
⑦	Tachometer red zone	During acceleration, engine RPM indicator needle may be allowed to briefly enter the red zone. However, the motorcycle must not be operated in the red zone for any length of time and must NEVER be operated beyond it.
⑧	Tripmeter reset knob	Reset knob for "zeroing" the trip meter.
⑨	Tripmeter	Indicates distance traveled. (meter can be reset for each trip)