



● Removing headlight

1. Raise the front side of the fuel tank, and disconnect the wire leads at the lead coupler ① and attach the rubber cap ② to the coupler.
2. Disconnect the wire leads ⑤ running to the instruments.
3. Remove one headlight bracket attaching bolt ③ and two nuts ④.

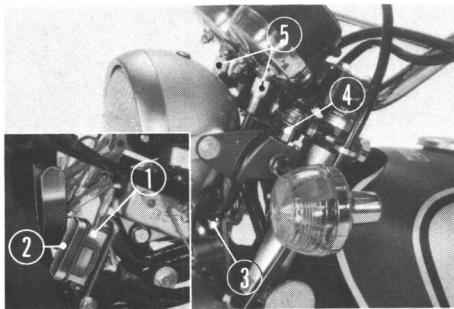

● Removing battery

1. Remove the side cover ⑥ by loosening the strap ⑦.
2. Loosen the battery holding strap ⑨.
3. Disconnect the battery cable connector ⑧ and remove the battery.

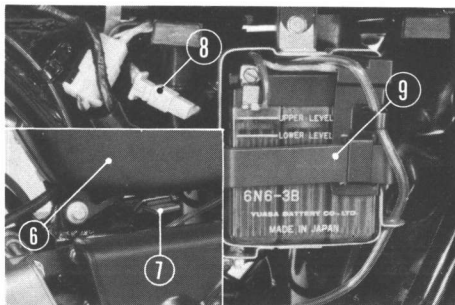

- ① Lead coupler ② Rubber cap
③ Attaching bolt ④ Nuts ⑤ Wire lead
⑥ Side cover ⑦ Side cover retaining strap
⑧ Battery cable connector
⑨ Battery holding strap