


## MAINTENANCE OPERATIONS

### Engine Oil Level

Check engine oil level at the start of each day the motorcycle is to be operated. The oil filler cap ① is located on the right crankcase cover and contains a dipstick for measuring oil level. Oil level must be maintained between the upper ② and

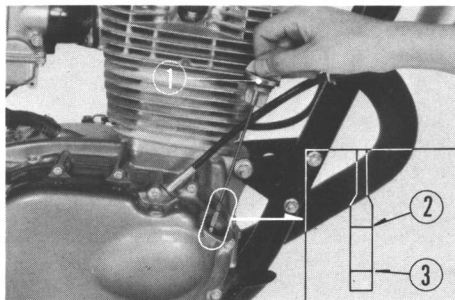

- ① Oil filler cap      ② Upper level mark  
③ Lower level mark

lower ③ oil level marks on the dipstick. Oil level must be checked with the motorcycle standing upright on level ground and the oil filler cap touching the surface of the oil filler hole orifice but not screwed in. Replenish oil up to the upper level mark, when oil level falls down near the lower level.

### Engine Oil Change

Engine oil should be changed in accordance with the maintenance schedule on page 30. Use only motor oil of the grade and viscosity recommended on page 18. When changing oil, drain the used oil from the crankcase while the engine is warm. This will ensure complete and rapid draining.