


## Cam Chain Adjustment

When cam chain is noisy, adjust its tension in the following manner :


1. Stop the engine.
2. Remove the generator cover and the rubber cap ⑥.
3. Turn the generator rotor ③ counter-clockwise ①.
4. Align the "T" mark ① with the index mark ② when the piston is at top

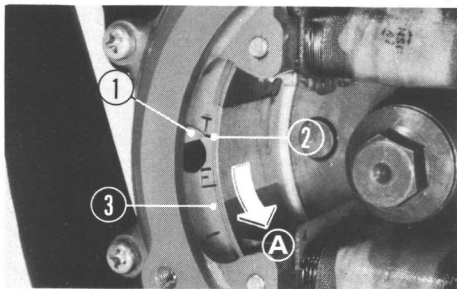

- ① "T" mark                      ② Index mark  
③ Generator rotor

dead center on the compression stroke. See valve tappet adjustment (page 38~39).

5. Loosen the cam chain adjuster lock nut ③.
6. Hold the generator rotor and loosen the cam chain adjuster ④. Tension is automatically applied to the cam chain.
7. Tighten the cam chain adjuster and the lock nut.

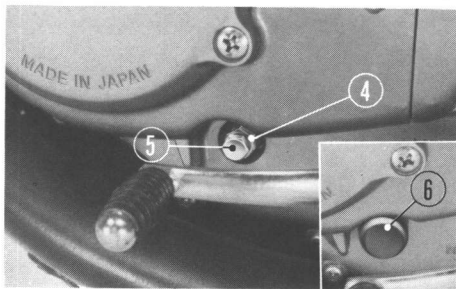

- ④ Cam chain adjuster lock nut  
⑤ Cam chain adjuster      ⑥ Rubber cap