

be performed by an authorized HONDA motorcycle dealer.

### Lubrication :

Commercially prepared drive chain lubricants may be purchased at most motorcycle shops and should be used in preference to motor oil or other lubricants. Saturate each chain link joint so that the lubricant will penetrate the space between adjacent surfaces of link plates and rollers.

### Wheel Spoke Retightening

Retighten the wheel spokes after the first 600 miles (1,000 Km) and every 3,000 miles (5,000 Km) thereafter.

Torque specification :


145 ~ 325 lb. ft. (20 ~ 45 kg. mm)

### Front Brake Adjustment

Free play, measured at the tip of the front brake lever ①, should be maintained at 0.8–1.2 in. (20–30 mm). Free play is the distance the brake lever moves before the brake starts to engage.

Major adjustments should be made using the adjuster located at the front wheel.

1. Loosen the lock nut ② and then turn the front brake adjusting nut ③.

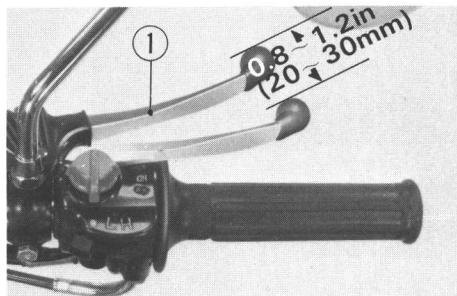

① Front brake lever      ② Free play