


Battery Maintenance

Battery Electrolyte Replenishment :

The battery is mounted under the seat, and is accessible by releasing the seat lock and raising the seat. Remove the tool tray and battery holding band. Raise the battery slightly to check the battery electrolyte.

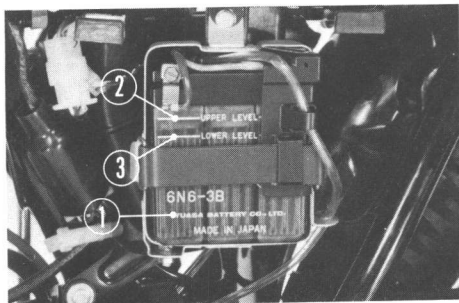

- ① Battery ② Upper level mark
③ Lower level mark

The electrolyte level must be maintained between the upper ② and lower level ③ marks on the side of the battery.

If the electrolyte level is found to be low, remove the battery filler caps and carefully add distilled water until the electrolyte level in each cell is between the upper and lower level marks. Use a small syringe or plastic funnel to add water. Only distilled water should be added to avoid contaminating the electrolyte.

Battery Removal and Installation :

The battery should be removed for prolonged storage, or for recharging if electrolyte specific gravity falls below 1.200. Refer to page 24 for this procedure.

CAUTION : When installing the battery, be careful not to bend or twist the vent tube.