

Standard oil level:

170 mm (6.7 in)

To lower the oil level (decrease volume), use a syringe. Add oil with a graduated beaker for accurate measurements.

The recommended oil level range is:

164 mm (6.5 in) to 194 mm (7.6 in).

NOTE:

- * Increase or decrease oil in increments of 5 cm^3 (0.17 US oz, 0.18 Imp oz).
 - * To prevent fork damage, do not fill past the recommended maximum level. Do not use a level lower than the recommended minimum to prevent poor performance.
5. Be sure the oil level is the same in both fork tubes.
 6. Clean and dry the fork spring with a lint free cloth. Install the fork spring and fork cap bolt. Torque the fork cap bolt to:
30 N·m (3.0 kg·m, 22 ft·lb).