


- Place a support under the engine to raise the rear wheel off the ground.
- Measure the spring length (1).

Spring length:


Standard	185.5 mm (7.30 in)
Minimum	180.5 mm (7.11 in)
Maximum	185.5 mm (7.30 in)

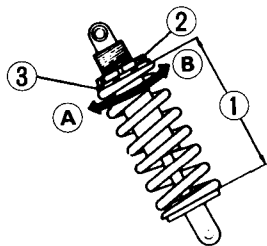

- (1) Spring length
 (2) Lock nut
 (3) Adjusting nut
- (A) Increase Preload
 (B) Decrease Preload

- To increase spring preload: Loosen the lock nut (2) with the optional pin spanner and turn the adjusting nut (3) to shorten the spring length. Do not shorten to less than:
 180.5 mm (7.11 in).

To decrease spring preload: Loosen the lock nut (2) and turn the adjusting nut (3) to increase the spring length. Do not increase to more than:
 185.5 mm (7.30 in).

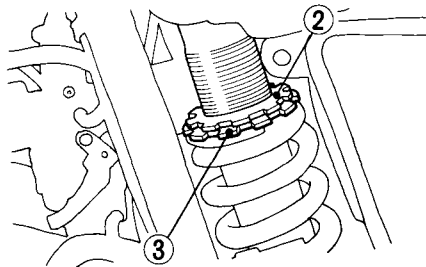

- (2) Lock nut
 (3) Adjusting nut