


BRAKE

Front Brake

Brakes are items of personal safety and should always be maintained in proper adjustment.

The distance the brake lever moves before the brake starts to engage is called free play. Measured at the tip of the front brake lever (1), free play should be maintained at:

25–30 mm (1–1-1/4 in).

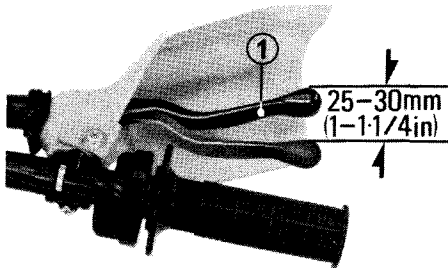


(1) Front brake lever

Adjustment:

Minor adjustments can be made with the brake cable adjuster at the lever (1).

1. Remove the dust cover (2). Loosen the lock nut (3) and turn the front brake cable adjuster (4). Tighten the lock nut.
2. If the adjuster is threaded out near its limit or the correct free play cannot be obtained using the cable adjuster, loosen the lock nut and turn in the cable adjuster completely. Tighten the lock nut and pull on the rubber dust cover.

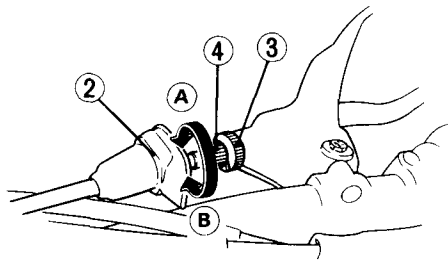

(2) Dust cover

(3) Lock nut

(4) Front brake cable adjuster

(A) Decrease free play

(B) Increase free play