

## TIRES

Proper air pressure will provide maximum stability, riding comfort and tyre life.

Check tyre pressure frequently and adjust if necessary.

### NOTE:

- \* Tyre pressure should be checked before you ride while the tyres are "cold".

Off road tyres are standard on this model. Select the right replacement tyre in accordance with the following specifications:

Cold tyre pressures kPa (kg/cm <sup>2</sup> , psi)	Front: 100 (1.0, 15) Rear: 100 (1.0, 15)
Maximum weight capacity	100 kg (220 lbs)
Tyre size	Front: 80/100-21 51M Rear: 100/100-17 58M

Check the tyres for cuts, imbedded nails, or other sharp objects. See your authorized Honda Dealer for replacement of damaged tyres or punctured inner tubes.

### ▲ WARNING

- \* **Do not attempt to patch a damaged tyre or inner tube. Wheel balance and tyre reliability may be impaired.**
- \* **Improper tyre inflation will cause abnormal tread wear and create a safety hazard. Underinflation may result in the tyre slipping on, or coming off of the rim causing tyre deflation that may result in a loss of vehicle control.**
- \* **Operation with excessively worn tyre is hazardous and will adversely affect traction and handling.**

Replace tyre before tread depth at the center of the tyre reaches the following limit:

Minimum tread depth
3 mm (1/8 in)