


AIR CLEANER

(Refer to the maintenance precautions on page 45).

The air cleaner should be serviced at regular intervals (page 41). When riding in unusually wet or dusty areas, more frequent service may be necessary.


1. Remove the left side cover screws (1) and the side cover (2).
2. Remove the wing nut (3).
3. Remove the air cleaner element (4).

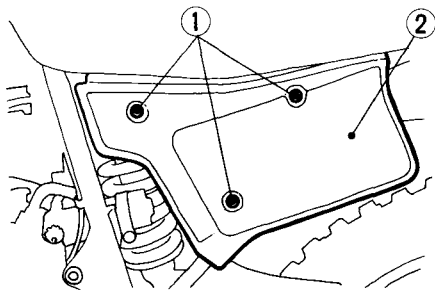

(1) Screws
46

(2) Side cover

4. Wash the element in clean nonflammable or high flash point solvent and dry it thoroughly.

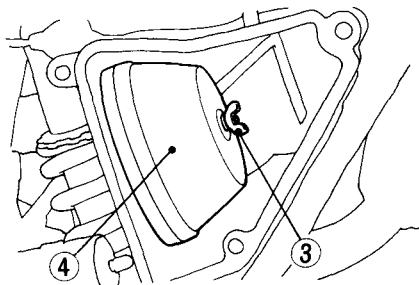

(3) Wing nut

(4) Air cleaner element