


CAM CHAIN TENSION

(Refer to the maintenance precautions on page 45).

1. Start the engine and let it idle.
2. Remove the rubber cap (1) and loosen the tensioner adjusting bolt (2).

When it is loosened, the cam chain tensioner will automatically position itself to provide the correct cam chain tension.

3. Retighten the tensioner adjusting bolt and install the rubber cap (1).

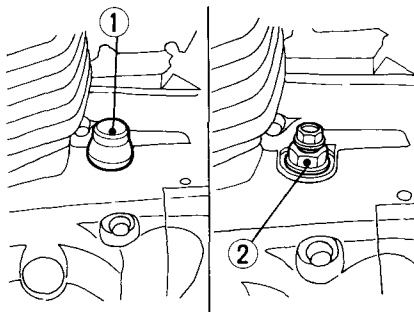

- (1) Rubber cap
(2) Tensioner adjusting bolt