


## SIDE STAND

(Refer to the maintenance precautions on page 45).

Check the side stand spring (1) for damage and loss of tension, and the side stand assembly for freedom of movement.

If the side stand is squeaky or stiff, clean the pivot area and lubricate the pivot bolt with engine oil.

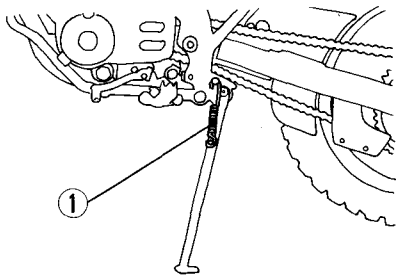

(1) Side stand spring