


HEADLIGHT

(Refer to the maintenance precautions on page 45).

Headlight Bulb:

1. Remove the headlight mounting bands (1) and remove the front number plate (2). Remove the headlight (3).
2. Remove the socket cover and remove the socket (5) from the headlight case. Push the bulb in and turn it counterclockwise.

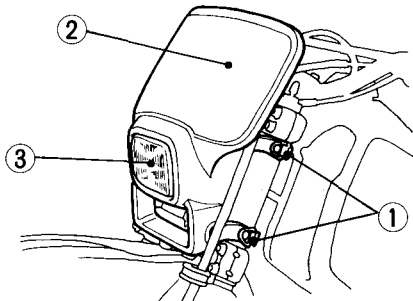

- (1) Headlight mounting band
(2) Number plate (3) Headlight


3. Replace the bulb (4) with a new one.
4. To install the headlight, reverse the removal procedure.

NOTE:

- * When installing the bulb, align the tab on the bulb with the groove in the socket.

Headlight Aim:

The headlight beam can be raised or lowered. Turn the adjusting screw (6) to move the headlight up or down to the proper adjustment.

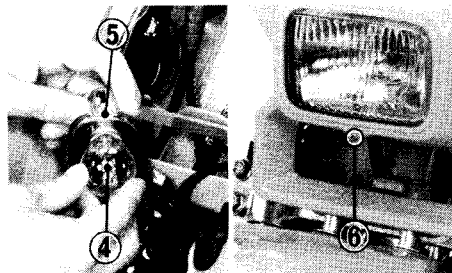

- (4) Headlight bulb (6) Adjusting screw
(5) Socket