

▲ WARNING

- * **Never use petrol or low flash point solvents for cleaning the air cleaner element. A fire or explosion could result.**
- 5. Soak the element in clean gear oil (SAE 80–90) until it is saturated. Then squeeze it to remove the excess.
- 6. Install the element with the lug on the holder aligned with the hole in the element, then hook the set spring and install the left side cover.