

Engine Oil

Engine oil quality is the chief factor affecting engine service life. Change the engine oil as specified in the maintenance schedule.


NOTE:

- * Change engine oil with the engine at normal operating temperature and the motorcycle on the side stand to assure complete and rapid draining.
- 1. Start the engine and let it idle for a few minutes.
- 2. Place an oil drain pan under the crankcase. Remove the oil filler cap/dipstick from the right crankcase cover and the drain plug (1).

⚠ WARNING

- * **A warmed-up engine and the oil in it are hot; be careful not to burn yourself.**
- 3. Operate the kickstarter several times while pressing the engine stop button to drain any oil which may be left in the engine.

4. After the oil has completely drained, make sure the sealing washer on the drain plug are in good condition.
5. Install the drain bolts to the specified torque.
Drain plug torque:
25 N·m (2.5 kg·m, 18 ft·lb)

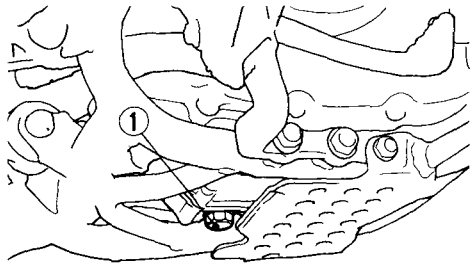

(1) Drain plug