

STARTING THE ENGINE

Always follow the proper starting procedure described below.

▲WARNING

- * Never run the engine in an enclosed area. The exhaust contains poisonous carbon monoxide gas that can cause loss of consciousness and lead to death.
- * Attempting to start the engine with the transmission in gear and the clutch engaged may result in injury or damage.

NOTE:

- * This motorcycle can be kickstarted with the transmission in gear by disengaging the clutch before operating the kickstarter.

Preparation

Make sure that the transmission is in neutral. Turn the engine stop switch to ○ (RUN) and the fuel cock ON.


Starting Procedure

To restart a warm engine, follow the procedure for “High Air Temperature.”

Normal Air Temperature

10° – 35° C (50° – 95° F)

1. Pull the choke lever (1) up all the way to Fully ON (A).

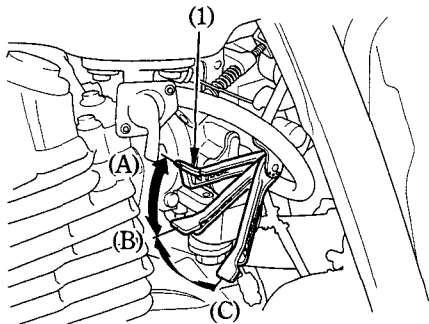

(1) Choke lever

(A) Fully ON
(B) Detent Position
(C) Fully OFF