

5. Soak the air cleaner in gear oil (SAE 80–90) until saturated, then squeeze out the excess oil.
6. Install the air cleaner with the lug on the holder aligned with the hole in the air cleaner, then hook the set spring and install the left side cover.