

4. Install the filter with the rubber seal (5) facing out, away from the engine. You will see "OUT-SIDE" mark (6) on the filter body, near the seal.

CAUTION:

*** Improper installation of the oil filter can cause serious engine damage.**

5. Reinstall the oil filter cover, making sure the bolts are tightened securely.


Oil Filter Bolt Torque:

12 N·m (1.2 kgf·m , 9 lbf·ft)

6. Perform steps 5 – 9 of Engine Oil Change.

Engine oil after draining and oil filter change:

1.4 ℓ (1.5 US qt , 1.2 Imp qt)

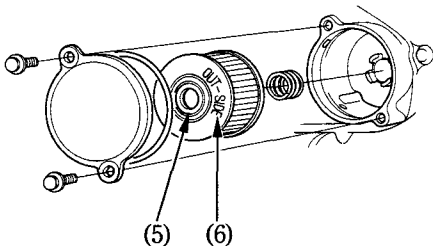

- (5) Rubber seal
(6) OUT-SIDE mark