

## **FUEL**

### **Fuel Valve**

The three way fuel valve (1) is on the left side near the carburetor.

### **OFF**

With the fuel valve in the OFF position, fuel cannot flow from the tank to the carburetor. Turn the valve OFF whenever the motorcycle is not in use.

### **ON**

With the fuel valve in the ON position, fuel will flow from the main fuel supply to the carburetor.


### **RES**

With the fuel valve in the RES position, fuel will flow from the reserve fuel supply to the carburetor. Use the reserve fuel only when the main supply is gone. Refill the tank as soon as possible after switching to RES.

The reserve fuel supply is:

1.5 ℓ (0.40 US gal , 0.33 Imp gal)

Remember to check that the fuel valve is in the ON position each time you refuel. If the valve is left in the RES position, you may run out of fuel with no reserve.

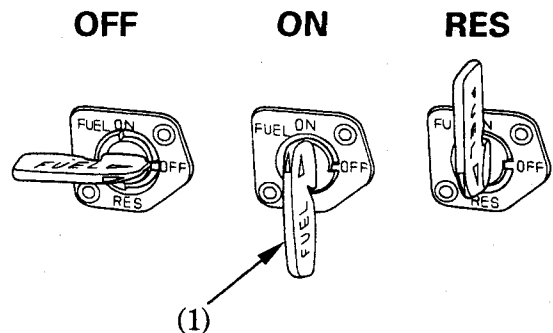

(1) Fuel valve