

03/05/20 10:07:52 31KCY680_086

Throttle

Refer to *Safety Precautions* on page 45.

Throttle Freeplay

RIGHT SIDE

(1) freeplay

Inspection

Check freeplay (1).

Freeplay: 1/16 – 1/4 in (2 – 6 mm)

If necessary, adjust to the specified range.

Upper Adjustment

Minor adjustments are generally made with the upper adjuster.

RIGHT SIDE

(1) rubber dust cover
(2) upper lock nut
(3) upper adjuster

1. Pull the rubber dust cover (1) back.
2. Loosen the upper lock nut (2) on the throttle cable mechanism.
3. Turn the upper adjuster (3).

(cont'd)

Service Your Honda 77