


Wheels

3. Rotate the wheel slowly to see if it appears to “wobble.” If it does, the rim is out of round or not “true.” If the wobble is noticeable, see your Honda dealer for inspection.

Front Wheel Removal

RIGHT FRONT

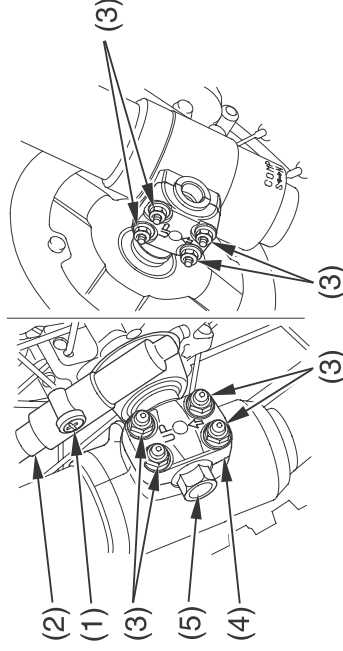

- (1) tripmeter cable set screw
- (2) tripmeter cable
- (3) axle holder nuts
- (4) axle holder
- (5) front axle

Removal

1. Raise the front wheel off the ground by placing a maintenance stand or support block under the engine. Secure the rear of the motorcycle with tie-down straps.
2. Remove the tripmeter cable set screw (1) and disconnect the tripmeter cable (2).
3. Remove the front axle holder nuts (3) and the front axle holder (4).
4. Unscrew and remove the axle (5). Remove the wheel.

Avoid depressing the brake lever and brake pedal when the wheel is off the motorcycle. This will force the caliper pistons out of the cylinders. The result will be loss of brake fluid. If this occurs, the brake system will require service. See your Honda dealer for this service.

(cont'd)