

Maintenance Schedule

Items		Frequency	Whichever Comes First ⇒	Initial Maint.	Regular Maint. Interval				Refer to page:		
					mi	100	600	1,200		1,800	2,400
					km	150	1,000	2,000		3,000	4,000
					Note	Month	I	6		12	18
NON-EMISSION RELATED ITEMS		Drive Chain	Note 1	I, L	I, L: every 300 mi (500 km) or 3 month				99		
		Drive Chain Slider			I	I	I	I	100		
		Brake Shoe Wear			I	I	I	I	87		
		Brake System			I	I	I	I	84		
		Clutch System			I	I	I	I	71		
		Side Stand				I		I	98		
	*	Suspension				I		I	81		
	*	Spark Arrester				C: every 1,000 mi (1,600 km) or every 100 operating hours				79	
	*	Nuts, Bolts, Fasteners			I		I		I	—	
	**	Wheels/Tires			I	I	I	I	I	89, 94	
	**	Steering Head Bearings			I		I		I	—	