

# Operating Controls

---

## Engine Stop Switch

The engine stop switch is used to turn the engine off during normal riding situations. To operate, turn the switch to the OFF ( ⌘ ) position. The switch must be in the RUN ( ○ ) position to start the engine.

## Front Brake Lever

The front brake lever is used to slow or stop your motorcycle. To operate, pull the lever. For information on braking techniques, see page 39.

## Throttle

The throttle controls engine rpm (speed). To increase engine rpm, rotate the grip toward you. To reduce engine rpm, rotate the grip away from you. The throttle will automatically return to the closed position (engine idle) when you remove your hand.